



http://www.jst.fr

Guide de choix



Application		Pas (mm)		0.1	0.25	0.3	0.4	0.5	0.6	0.8	1.0	1.1	1.2	1.25	1.27	1.3	1.5	1.8	2.0	2.3	2.5	2.54	3.0	3.3	3.5	3.81	3.96	4.0	4.5	5.0	5.08	5.1	6.2	6.5	7.0	7.92	8.0	11.0	11.88	13.0	1 vole	autre																	
- FIL	A sertir	Déconnectable								SUH	CSH NSH SH SHD SHL SHLD	SFG SFD	ACH ACHF ACHL	GVH AGH GH GHD			ADH	ZPD ZH,ZE CZH/CZHW ZF	SFK SFH LEA LEH	MEC,PH PUD SFV PH High box PHD, PA PA, High box PAD, PND PBV,JWPF APL, PLI	BHL	EH,MEC, XH XH High box, XA XA High box XM High box XAD, NH, HR PXA, JFA-J2000	RA RE RF	LEN	BHS BD	JFA- J300	VH VH High box HL VU	JWPS BH LEB	YL High box	NV V DV SV XL WPJ	VB LC LC-L JFA- J300	BHT VL	VYH	VA NVA	LV	VT	BD	ACA CN SMF SDF SPF																					
		Encartable														SZN	SAN SUN SGN	SCN	SDN	SIN																																							
	Auto dénuant	Déconnectable								SUR SUH	SR CS TCS SSR ASR CSR					ZR ZFW CZ/CZW	CR, KR, CK KRD, DR KRW, PAF	NR, NRD HR	VR																																								
		Encartable														ZA	DA DD/DS	DB																																									
- CARTE				JADN JAS JAV JAL JAN	JMD JMC	JU	JCD JFC				HO, JET JE, JED 1.25FJ 1.25FJ-N 1.25FJ	HAS JXV	HQM 1.5FJ HOB JDV JDF	HQF, FJ FJ-K FJ-V FJ-L MO	JQ, JL 2.5FJ 2.5FJ-N HVO, JHS MBS	DIN																																											
Pour FFC/FPC	Zéro force d'insertion		FVZ, FGEM	FXS FXW FXM FXD FXC FXR FXRH FXZT	FZN	FHA, FLH, FLZ FLS, FHN FKZ, FHH FHX FHSY FSZ FLZX FLZT		FMZ FPZ FAZ FUN	FU	FRZ																																																	
		Non-ZIF		FX FXL	FZA		FSD	FM, FMS FMN, FMH	FE FE High box FFS																																																		
Embase																				BC BCS	2.5SB TB	2.54SB						VS																	BTP, BTP-1.0 BTC, PB AN, PMZ														
Jumper											MIH																																																
Pour PC card	Déconnectable										Memory card A DRAM card D Small PC card MB				Memory card B PC card C CF card MA PC card CB PC card CG																																												
Pour Smart card & autres	Déconnectable																																																D sub J, D sub JS D sub JH, D sub JK D sub KS, D sub KH MD, MD-SMT, MDD UB, UB min-B,UB3 RV, MV, MS, LS LK-SMT, LK-DIP, MJ MJ-8P, VCA, JFB- C										
connection interface	Déconnectable						MP				DMX																																								SC, MU, LC AYU1, AYU3 RV, CL RPZ, RIZ RWZ, OTZ TSD, RPJ								
Fibre optique et coaxial																																																											
Fil à fil																	ZM TZ/TZW	PAL TR TKR JWPF		XM, THR SM, HM, TNR XA, XAD, XAG								HL BL SL	BHS JFA-J300	HL BL SL	BHM JWPS LEB	YL YLN EL	ZL XL WPJ	JFA- J300	BHT VL	MWP	JFA- J5000																					WPK CN	

Nous contacter : marketing@jst.fr Tél : 03 26 72 45 03